

PHANTOM SHIELD IMMOBILIZER

REMOTE PAIRING

- 1.)
Press the button on the device three times. The LED indicator will flash three times.
- 2.)
After the LED indicator flashes three times, press the unlock button on the key fob.
- 3.)
After pressing the unlock button, the LED indicator will flash four times. Once it finishes, press the lock button.
The indicator will flash again. When it does, test the key fob by pressing the unlock button and then the lock button. If successful, you should hear a click each time you press these buttons.



UNPAIR KEY FOBS

To clear the immobilizer (unpair key fobs), press the button on the device nine times. The indicator light will flash a few times and then stop blinking. To test, press the lock and unlock buttons. If you don't hear any clicks from the key fob, you have successfully unpaired the key fobs.

Please be advised that clearing the system will unpair all remotes. This is necessary only if you lose a key fob and want to erase it from the device.